

# 6SP0110T Description & Application Manual

Driver solution for HybridPACK™ 1 IGBT modules with an electrical interface

## Abstract

The 6SP0110T is a six-channel driver with an electrical interface. The driver is based on CONCEPT's SCALE-2 chipset, a highly integrated technology for the reliable driving and safe operation of IGBTs.

Perfectly matched driver versions are available for HybridPACK™ 1 IGBT modules. The plug-and-play capability of the driver allows immediate operation after mounting. The user needs invest no effort in designing or adjusting it to a specific application.

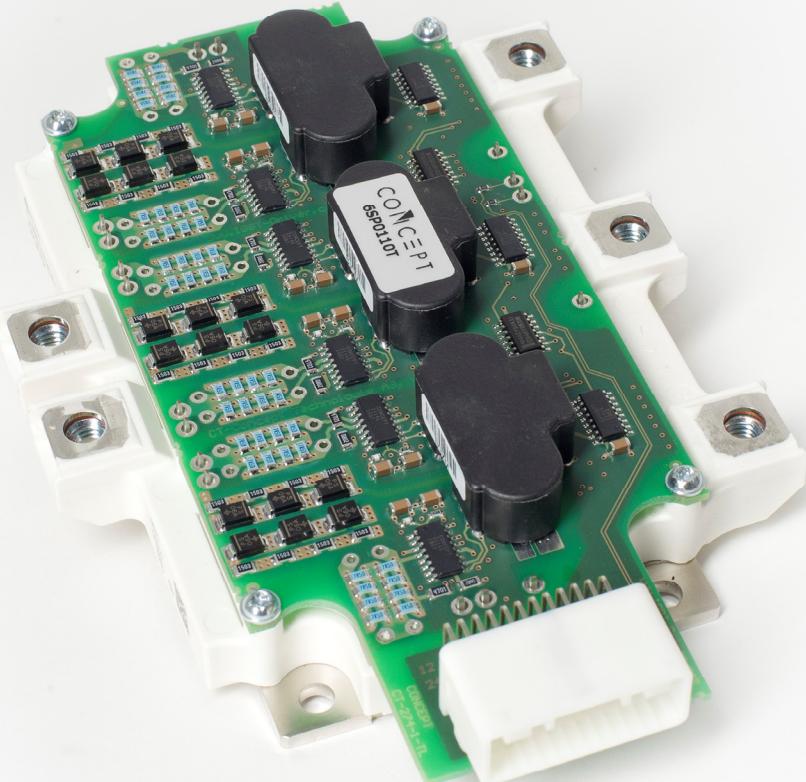


Fig. 1 6SP0110T soldered onto a HybridPACK™ 1 IGBT module

HybridPACK is a trademark of Infineon Technologies AG, Munich

## Description and Application Manual

### Contents

<b>System Overview .....</b>	<b>4</b>
<b>The Six Steps to Success .....</b>	<b>5</b>
1. Choose a suitable driver .....	5
2. Attach the drivers to the IGBT modules .....	5
3. Connect the driver to the control electronics .....	5
4. Select the operating mode .....	5
5. Check the driver function .....	5
6. Set up and test the power stack .....	6
<b>Mechanical Dimensions .....</b>	<b>7</b>
<b>Pin Designation of Connector X1 .....</b>	<b>8</b>
<b>Recommended Interface Circuitry for Connector X1 .....</b>	<b>9</b>
<b>Description of Interface X1 .....</b>	<b>11</b>
General .....	11
VCC terminal .....	11
MOD (mode selection) .....	11
INA_x, INB_x (channel drive inputs, e.g. PWM) .....	12
SO1_x, SO2_x (status outputs) .....	12
TB (input for adjusting the blocking time) .....	13
NTC terminals .....	13
<b>How Do 6SP0110T SCALE-2 Drivers Work in Detail? .....</b>	<b>14</b>
Overview .....	14
Power supply and electrical isolation .....	15
Power-supply monitoring .....	15
V <sub>ce</sub> monitoring / short-circuit protection .....	16
Dynamic behavior of IGBTs .....	16
Turn-on of the IGBT / commutation of diode current .....	16
Turn-off of the IGBT .....	17
Advanced active clamping .....	17
Parallel connection of 6SP0110T .....	19
Low-inductance layout .....	19
<b>Bibliography .....</b>	<b>19</b>
<b>The Information Source: SCALE-2 Driver Data Sheets .....</b>	<b>20</b>
<b>Quite Special: Customized SCALE-2 Drivers .....</b>	<b>20</b>
<b>Technical Support .....</b>	<b>20</b>

---

Target

<b>Quality.....</b>	<b>20</b>
<b>Legal Disclaimer.....</b>	<b>20</b>
<b>Ordering Information.....</b>	<b>21</b>
<b>Information about Other Products .....</b>	<b>21</b>
<b>Manufacturer.....</b>	<b>21</b>

## Description and Application Manual

### System Overview

The 6SP0110T are plug-and-play drivers based on the highly integrated SCALE-2 chipset developed by CONCEPT /1/. This is a set of application-specific integrated circuits (ASICs) that cover the main range of functions needed to design intelligent gate drivers. The SCALE-2 driver chipset is a further development of the proven SCALE technology /2/.

The basic topology of the 6SP0110T driver is shown in Fig. 2. The values for the gate resistors and other key components can be found in the specific datasheets for a given IGBT module /3/.

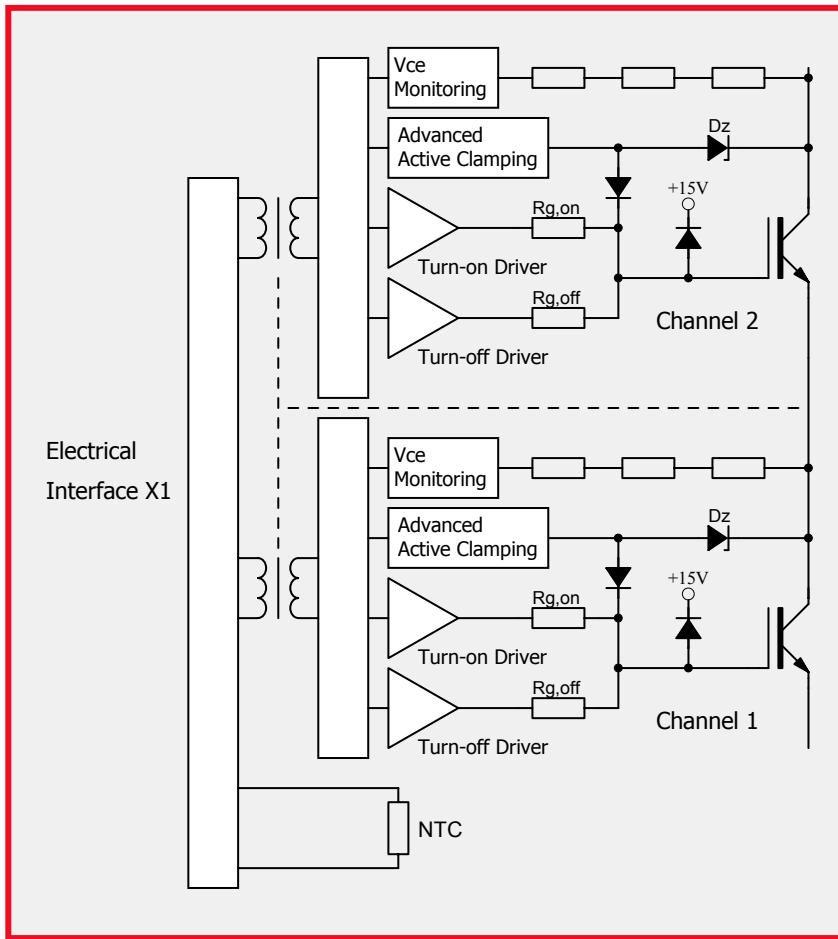


Fig. 2 Basic schematic of the 6SP0110T driver (only one phase and the NTC shown)

The driver contains all necessary components for optimal and safe driving of the relevant IGBT module: smallest gate resistors in order to minimize switching losses, gate clamping, active-clamping diodes (overvoltage protection at turn-off),  $V_{ce}$  monitoring (short-circuit protection), short-pulse suppression as well as the input electrical connector X1. Moreover, it includes components for setting the turn-off trip level, the response time and the dead time between both channels in half-bridge mode. Its plug-and-play capability means that it is ready to operate immediately after mounting. The user needs invest no effort in designing or adjusting the driver to a specific application.

## The Six Steps to Success

The following steps point out the easy way to use 6SP0110T drivers in power converters:

### 1. Choose a suitable driver

When applying 6SP0110T drivers, you should note that they are specifically adapted to a particular type of IGBT module.

The type designation of the driver consequently also includes a number corresponding to a specific IGBT module (see "Ordering Information").

**These drivers are not valid for IGBT modules other than those specified. Incorrect use may result in failure.**

### 2. Attach the drivers to the IGBT modules



Any handling of IGBT modules or drivers is subject to the general specifications for protecting electrostatic-sensitive devices according to international standard IEC 60747-1, Chapter IX or European standard EN 100015 (i.e. the workplace, tools, etc. must comply with these standards).

**If these specifications are ignored, both IGBTs and drivers may be damaged.**

The driver can be easily mounted onto an IGBT module by soldering and screwing the corresponding terminals.

### 3. Connect the driver to the control electronics

Connect the driver plug X1 to your control electronics and supply the driver with a voltage of +15V.

### 4. Select the operating mode

The operating mode can be set with input MOD (interface X1: pin 17). For details, see page 11).

### 5. Check the driver function

Check the gate voltage: For the off-state, the nominal gate voltage is specified in the relevant data sheet /3/. For the on-state, it is +15V. Also check the input current consumption of the driver without clock signals and at the desired switching frequency.

These tests should be performed before installation, as the gate terminals may otherwise not be accessible.

---

## Description and Application Manual

---

### **6. Set up and test the power stack**

---

Before starting up the system, it is recommended that each IGBT module be checked separately under power-cycling conditions. It is usually sufficient to apply the single or double-pulse technique. CONCEPT specially recommends users to check that the IGBT modules switch inside the SOA in the worst case condition, as this strongly depends on the specific converter construction.


**Even if only single IGBTs are tested, all the system's gate drivers must be supplied with energy. All the other IGBTs are then kept in the off state by applying negative gate voltages. This is particularly important when switching the IGBTs under test.**

The short-circuit behavior can also be verified at this point.

The system is then ready to start under real-world load conditions. This allows the thermal behavior of the whole arrangement to be determined.


The system must be re-qualified over the entire specified range of temperature and load conditions.

**CAUTION: All handling with high voltages involves risk to life.  
It is imperative to comply with the respective safety regulations!**

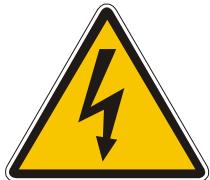

## Target

### **Mechanical Dimensions**

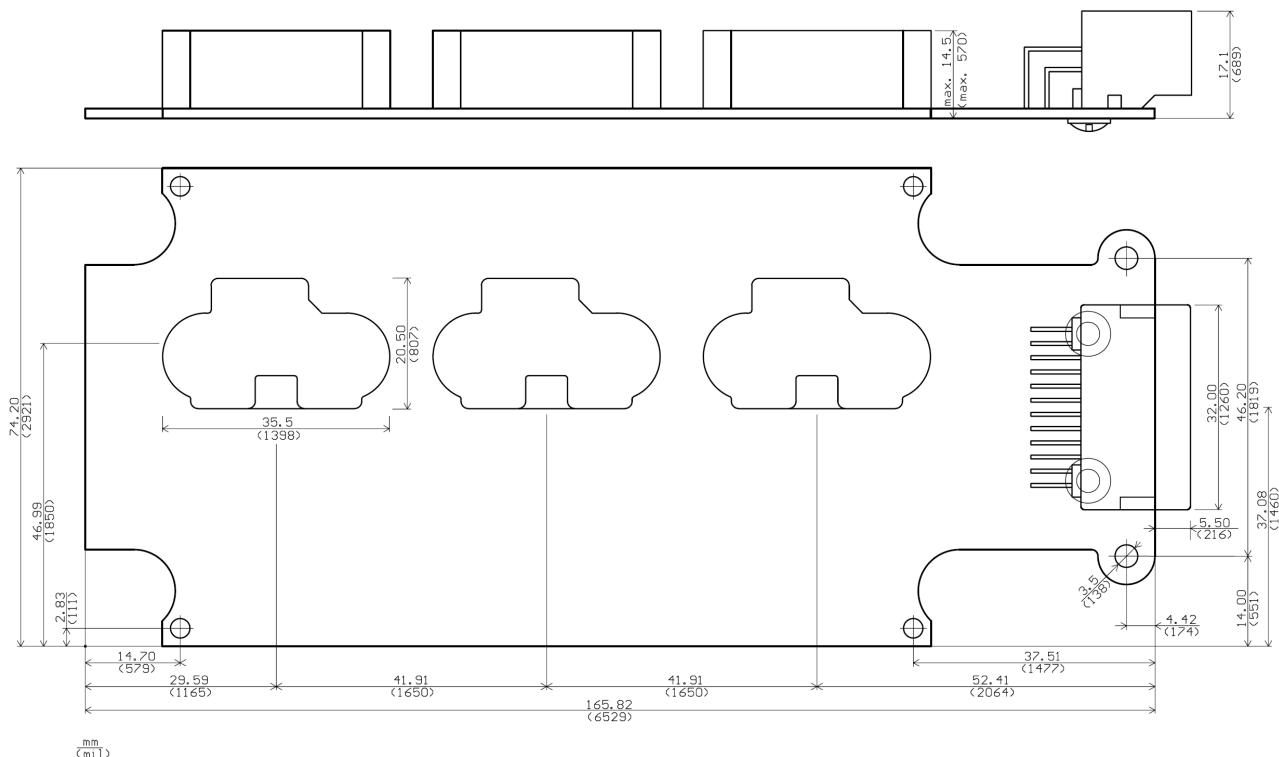

*Fig. 3 Mechanical dimensions of 6SP0110T*

Electrical connector X1: 1318853-3 from TYCO Electronics

Recommended cable connector: 1318917-1 with crimp contacts 1123343-1 from TYCO Electronics

## Description and Application Manual

### Pin Designation of Connector X1

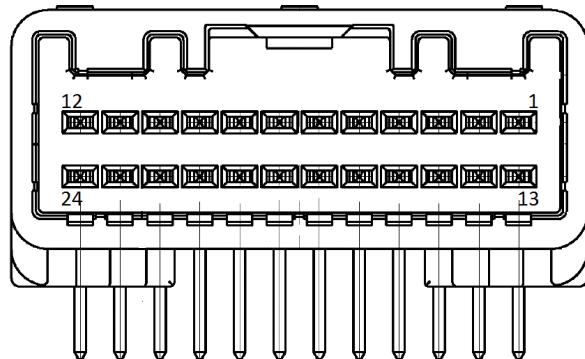


Fig. 4 Front view of connector X1

<b>Pin Des.</b>	<b>Function Pin</b>	<b>Pin Des.</b>	<b>Function Pin</b>		
1	VCC	+15V supply voltage	13	VCC	+15V supply voltage
2	VCC	+15V supply voltage	14	GND	Ground
3	SO1_1	Status output phase 1, low-side	15	INA_1	Signal input phase 1, low-side
4	SO2_1	Status output phase 1, high-side	16	INB_1	Signal input phase 1, high-side
5	GND	Ground	17	MOD	Mode selection (direct/half-bridge)
6	SO1_2	Status output phase 2, low-side	18	INA_2	Signal input phase 2, low-side
7	SO2_2	Status output phase 2, high-side	19	INB_2	Signal input phase 2, high-side
8	GND	Ground	20	TB	Blocking time
9	SO1_3	Status output phase 3, low-side	21	INA_3	Signal input phase 3, low-side
10	SO2_3	Status output phase 3, high-side	22	INB_3	Signal input phase 3, high-side
11	N.C.	Not connected	23	NTC+	NTC-thermistor
12	N.C.	Not connected	24	NTC-	NTC-thermistor

Target

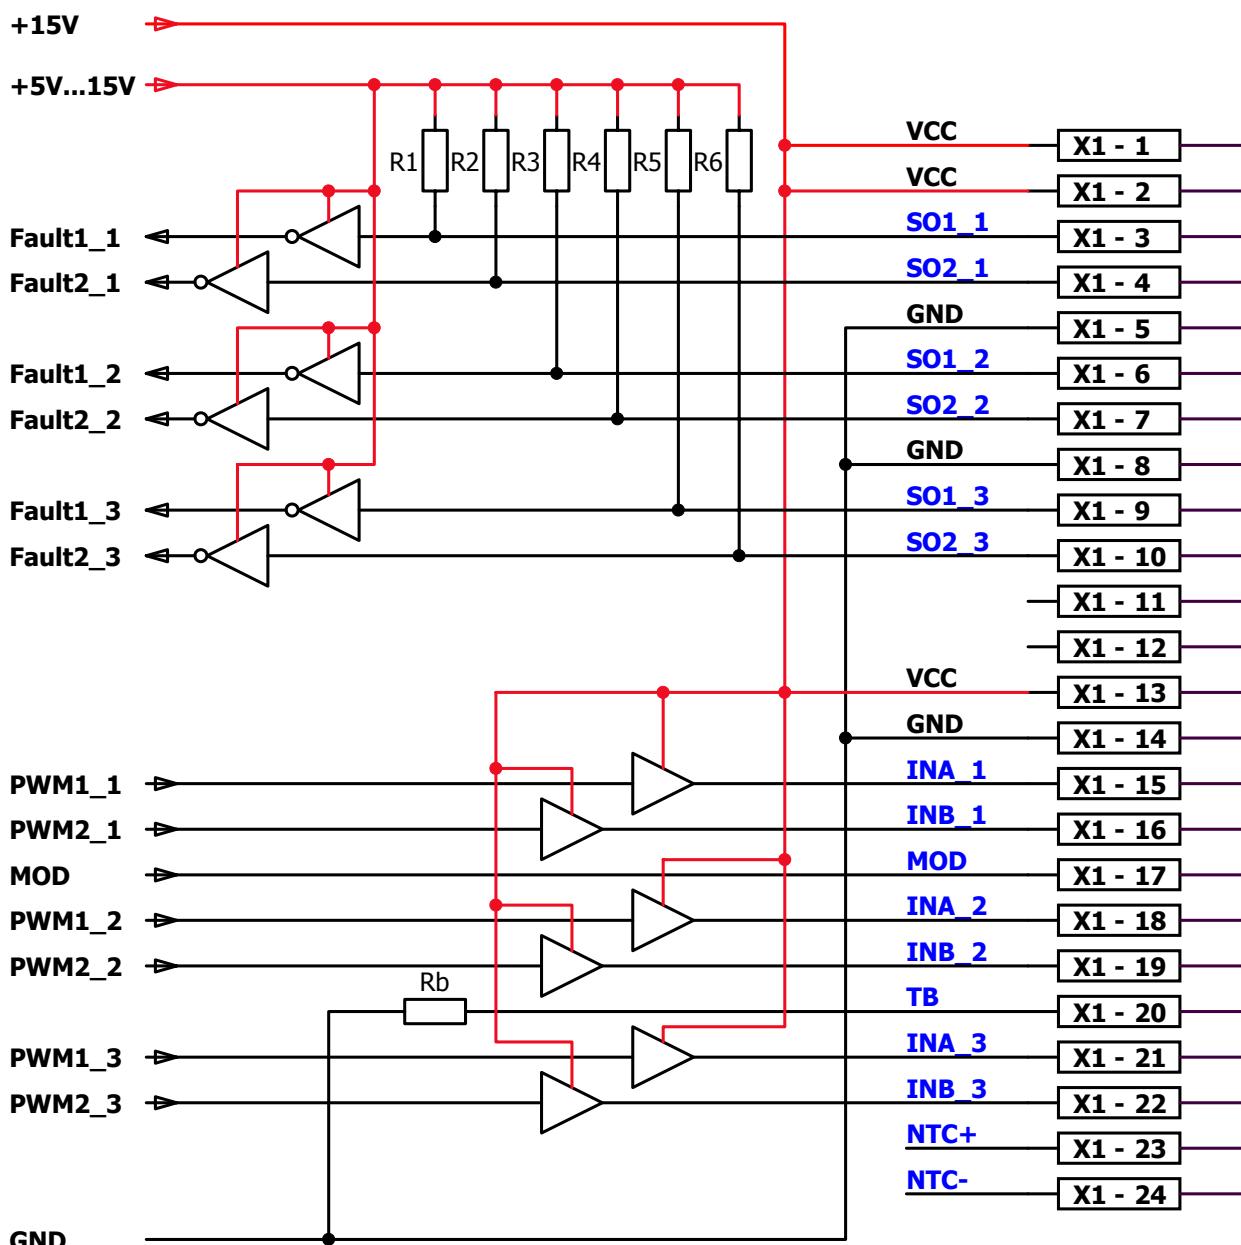
**Recommended Interface Circuitry for Connector X1**

Fig. 5 Recommended user interface of 6SP0110T

## Description and Application Manual

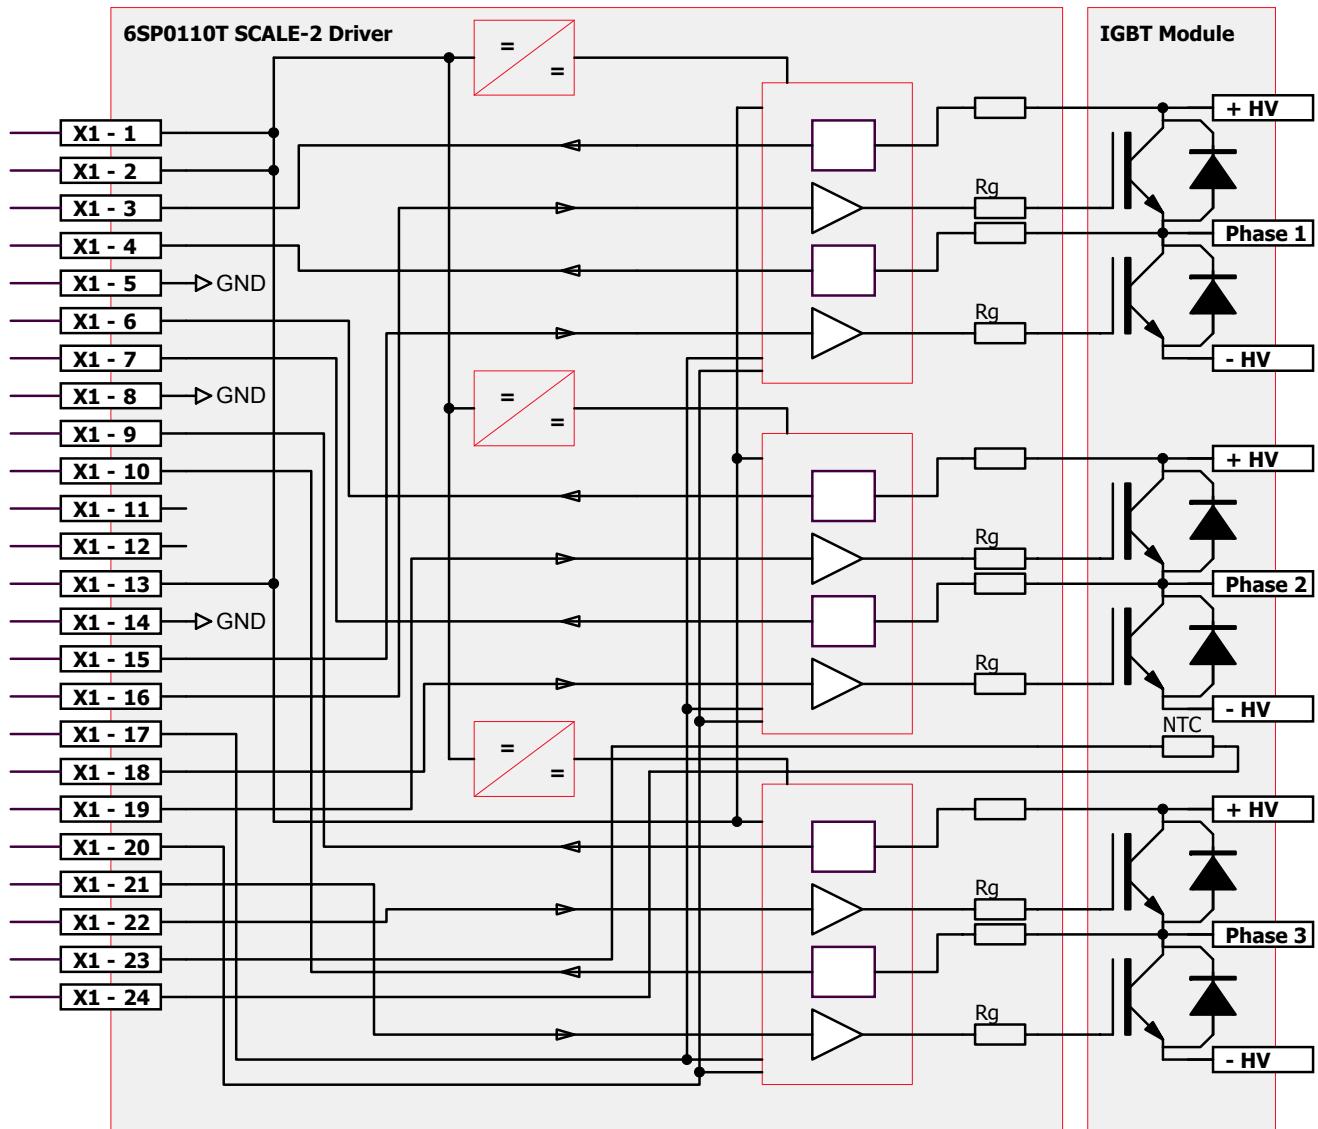


Fig. 6 Block diagram covering SCALE-2 driver 6SP0110T and IGBT module

## Description of Interface X1

### General

The interface X1 of the driver 6SP0110T is very simple and easy to use.

The driver has the following terminals:

- 3 x power-supply terminals (but only one 15V power supply is needed)
- 6 x drive signal inputs
- 6 x status outputs (fault returns)
- 1 x mode selection (half-bridge mode / direct mode)
- 1 x input to set the blocking time
- 2 x NTC-thermistor terminals

The driver is equipped with a 24-pin interface connector.

All inputs are ESD-protected. Moreover, all digital inputs have Schmitt-trigger characteristics.

### VCC terminal

The driver has three VCC terminals on the interface connector to supply the primary side and the DC-DC converters for the secondary sides.

As the driver can deliver a total power of  $6 \times 1W = 6W$ , the maximum input current drawn from the +15V supply is approx. 500mA.

All VCC terminals must be connected to a single +15V power supply. The driver limits the inrush current at startup, and no external current limitation of the voltage source for VCC is needed.

### MOD (mode selection)

The MOD input allows the operating mode to be selected.

#### Direct mode

If the MOD input is not connected (floating), or connected to VCC, direct mode is selected. In this mode, there is no interdependence between the two channels of one phase. Input INA\_x (x is the phase number and can be equal to 1, 2 or 3) directly influences the low-side IGBT while INB\_x influences the high-side IGBT of the corresponding phase. High level at an input (INA\_x or INB\_x) always results in turn-on of the corresponding IGBT. This mode should be selected only when the dead times are generated by the control circuitry so that each IGBT receives its own drive signal.

**Caution:** Synchronous or overlapping timing of both switches of a half-bridge basically shorts the DC link.

#### Half-bridge mode

If the MOD input is low level (connected to GND), half-bridge mode is selected. In this mode, the inputs INA\_x and INB\_x have the following functions: INA\_x is the drive signal input while INB\_x acts as the enable input of the corresponding phase (see Fig. 7).

When input INB\_x is low level, both channels are blocked. If it goes high, both channels are enabled and follow the signal on the input INA\_x. At the transition of INA\_x from low to high, high-side IGBT turns off

## Description and Application Manual

immediately and the low-side IGBT turns on after a dead time. The dead time is set by a resistor on the 6SP0110T.

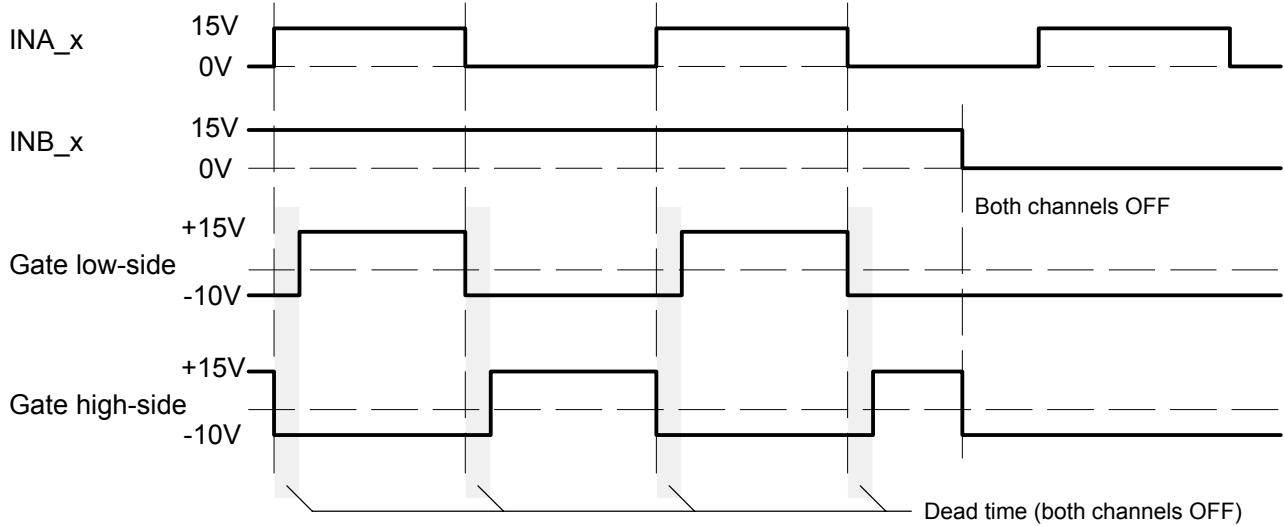


Fig. 7 Signals in half-bridge mode

### **INA\_x, INB\_x (channel drive inputs, e.g. PWM)**

INA\_x and INB\_x are basically drive inputs, but their function depends on the MOD input (see above).

15V logic-level signals should be applied at INA\_x and INB\_x.

### **SO1\_x, SO2\_x (status outputs)**

The outputs SO<sub>x</sub>\_x have open-drain transistors. When no fault condition is detected, the outputs have high impedance. An internal current source of 500µA pulls the SO<sub>x</sub>\_x outputs to a voltage of about 4V when leaved open. When a fault condition is detected in a channel, the corresponding status output SO<sub>x</sub>\_x goes to low (connected to GND).

All SO<sub>x</sub>\_x outputs can be connected together to provide a common fault signal. However, it is recommended to evaluate the status signals individually to allow fast and precise fault diagnosis.

The maximum SO<sub>x</sub>\_x current in a fault condition should not exceed the value specified in the driver data sheets /3/.

## How the status information is processed

- a) A fault on the secondary side (detection of short-circuit of IGBT module or supply undervoltage) is transmitted to the corresponding SO<sub>x</sub>\_x output immediately. The corresponding SO<sub>x</sub>\_x output is automatically reset (returning to the high impedance state) after the blocking time T<sub>b</sub> has elapsed (read the relevant data sheet for timing information /3/).
- b) A supply undervoltage on the primary side is indicated to both SO<sub>x</sub>\_x outputs of a same phase at the same time. Both SO<sub>x</sub>\_x outputs are automatically reset (returning to a high impedance state) when the undervoltage on the primary side disappears (read the relevant data sheet for timing information /3/).

## TB (input for adjusting the blocking time)

The terminal TB allows the factory-set blocking time to be reduced by connecting an external resistor to GND (see Fig. 5). The following equation calculates the necessary resistor R<sub>b</sub> connected between pins TB and GND in order to define the desired blocking time T<sub>b</sub> (typical value):

$$R_b[k\Omega] = \frac{2574 + 47 \cdot T_b[ms]}{92 - T_b[ms]} - 2.2 \quad \text{where } 20ms < T_b < 90ms$$

The blocking time can also be set to a minimum of 9μs by selecting R<sub>b</sub>=0Ω.

If not used, the input TB can be left open.

## NTC terminals

The driver has a non-insulated NTC-thermistor output on the interface. This is connected via a series resistor of 20Ω to the NTC thermistors of the IGBT module. The NTC-thermistor output is protected with a 24V transient voltage suppressor diode according to Fig. 8.

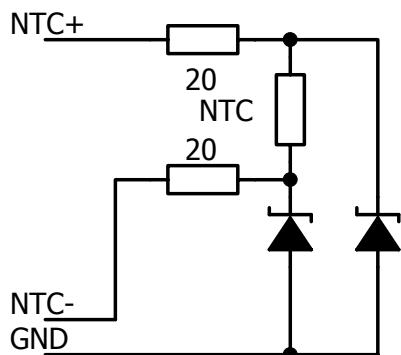


Fig. 8 Connection of the NTC-thermistors to the connector X1

## Description and Application Manual

### How Do 6SP0110T SCALE-2 Drivers Work in Detail?

## Overview

The 6SP0110T series of plug-and-play six-channel drivers are designed for HybridPACK™ 1 modules. All drivers of the SCALE-2 driver family with an electrical interface are equipped with usual protection functions such as Vce monitoring for short-circuit protection, operation inhibit after fault, supply-undervoltage shutdown and status feedback.

Outstanding features of 6SP0110T SCALE-2 drivers are: compact size, simple mounting - directly onto the IGBT module, advanced active-clamping function and short-pulse suppression. Active clamping describes an active scheme designed to protect the IGBTs against overvoltage during turn-off. It is particularly relevant when turning an IGBT off in cases of high DC-link voltage and collector current or short circuit.

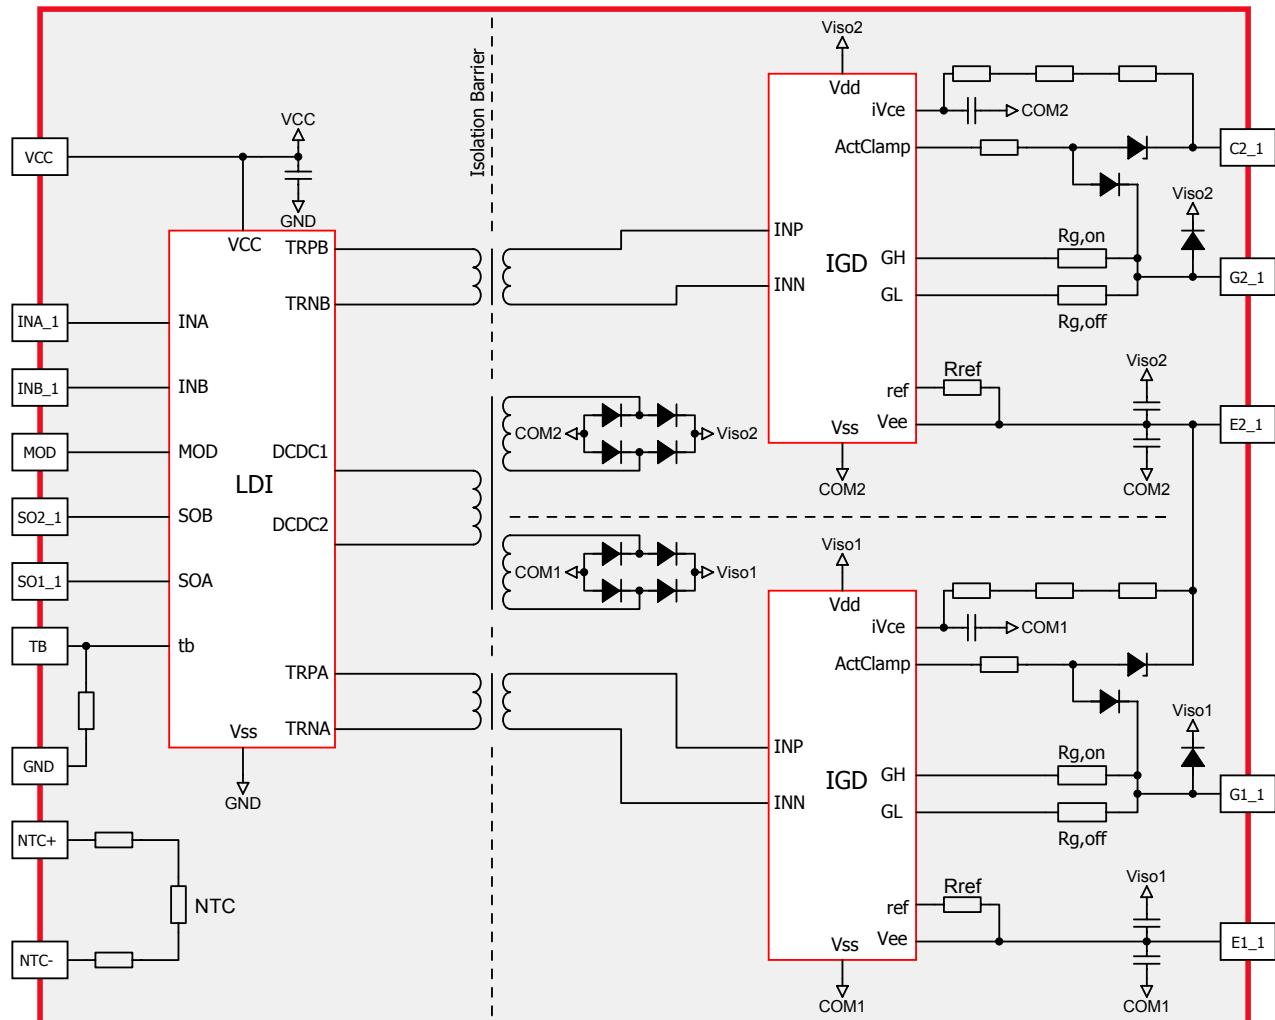


Fig. 9 Block diagram of the 6SP0110T SCALE-2 driver (only phase 1 shown)

---

Target

---

## Power supply and electrical isolation

---

The driver is equipped with a DC/DC converter to provide an electrically insulated power supply to the gate driver circuitry. The signal isolation is realized with transformers. All transformers (DC/DC and signal transformers) feature safe isolation to EN 50178 and IEC 60664-1, protection class II between primary side and either secondary side (refer to the data sheets /3/).

Note that the driver needs a stabilized supply voltage.

---

## Power-supply monitoring

---

The driver's primary side as well as all secondary-side driver channels are equipped with a local undervoltage monitoring circuit.

In case of a primary-side supply undervoltage, both IGBTs of a phase are driven with a negative gate voltage to keep them in the off-state (both channels are blocked) and the fault is transmitted to both outputs SO1\_x and SO2\_x until the fault disappears.


In case of a secondary-side supply undervoltage, the corresponding IGBT is driven with a negative gate voltage to keep it in the off-state (the channel is blocked) and a fault condition is transmitted to the corresponding SOx\_x output. The SOx\_x output is automatically reset (returning to a high impedance state) after the blocking time.

Even in the case of a low power supply voltage, the driver provides a low-impedance path from the IGBT gate to the emitter.

**Within a half-bridge, it is advised not to operate the IGBTs with an IGBT driver in the event of a low supply voltage. Otherwise, a high rate of increase of  $V_{ce}$  may cause partial turn-on of these IGBTs.**

## Description and Application Manual

### **V<sub>ce</sub> monitoring / short-circuit protection**

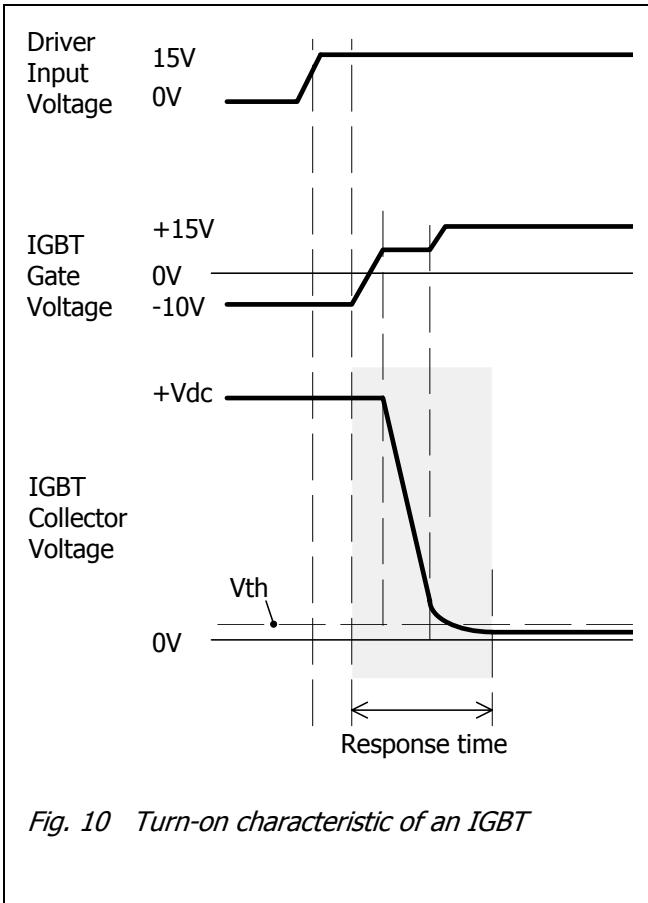

The basic  $V_{ce}$  monitoring circuit implemented in 6SP0110T SCALE-2 drivers is illustrated in Fig. 9. The IGBT collector-emitter voltages are measured with a resistor network.  $V_{ce}$  is checked after the response time (see Fig. 10) at turn-on to detect a short circuit. If this voltage is higher than the programmed threshold  $V_{th}$ , the driver detects a short circuit at the IGBT and signals it immediately to the corresponding  $SO_x_x$  output. The corresponding IGBT is switched off. The IGBT is kept off (non-conducting) and the fault is shown at pin  $SO_x_x$  as long as the blocking time is active.

The blocking time is applied independently to each channel. It starts when  $V_{ce}$  exceeds the threshold of the  $V_{ce}$  monitoring circuit.

Please read the relevant driver data sheet for timing information /3/.

**Note:** The desaturation function is for short-circuit detection only and cannot provide overcurrent protection. However, overcurrent detection has a lower time priority and can be easily provided by the application.

### **Dynamic behavior of IGBTs**

The dynamic behavior of IGBT modules depends on the type and manufacturer due to the particular behavior of the included IGBT and diode chips, the particular module construction and the distribution of internal gate resistances and inductances. Note that different module types from the same manufacturer may also require a specific gate-driver adaptation.

CONCEPT therefore supplies specific versions of SCALE-2 plug-and-play drivers adapted to the particular IGBT module. **These drivers must not be used with IGBT modules other than those for which they were specified.**

### **Turn-on of the IGBT / commutation of diode current**

When a driver input goes high, the gate driver turns on the corresponding IGBT. The driver already includes the gate resistors, which are matched to the relevant IGBT module.

The driver is optimized to achieve minimum switching losses for the case of relatively low inductances within the power stack. It is recommended to check the commutation behavior within the final system assembly.

## Turn-off of the IGBT

The IGBT is turned off when the corresponding input turns low. The gate resistors are determined by CONCEPT and must not be altered.

Fast turn-off of the IGBT may cause overvoltage, which increases with DC-link voltage or load current. The turn-off overvoltage can be approximated by:

$$V_{tr} = -L_s * di/dt$$

where  $V_{tr}$  is the turn-off overvoltage and  $L_s$  the stray inductance.

Most competing drivers are unable to limit the overvoltage in case of overload or short circuit. However, this is essential for high-power or high-voltage IGBTs. To solve this problem, SCALE-2 plug-and-play drivers provide an advanced active-clamping function.

## Advanced active clamping

Active clamping is a technique designed to partially turn on the IGBT in case the collector-emitter voltage exceeds a predefined threshold. The IGBT is then kept in linear operation. The basic circuit for active clamping can be found in /4/.

Basic active-clamping topologies implement a single feedback path from the IGBT's collector through transient voltage suppressor devices (TVS) to the IGBT gate. The 6SP0110T SCALE-2 drivers support CONCEPT's advanced active clamping based on this principle: when active clamping is activated, the turn-off MOSFET of the driver is switched off in order to improve the effectiveness of the active clamping and to reduce the losses in the TVS. This feature is mainly integrated in the secondary-side ASIC. The circuitry used is shown in Fig. 9.

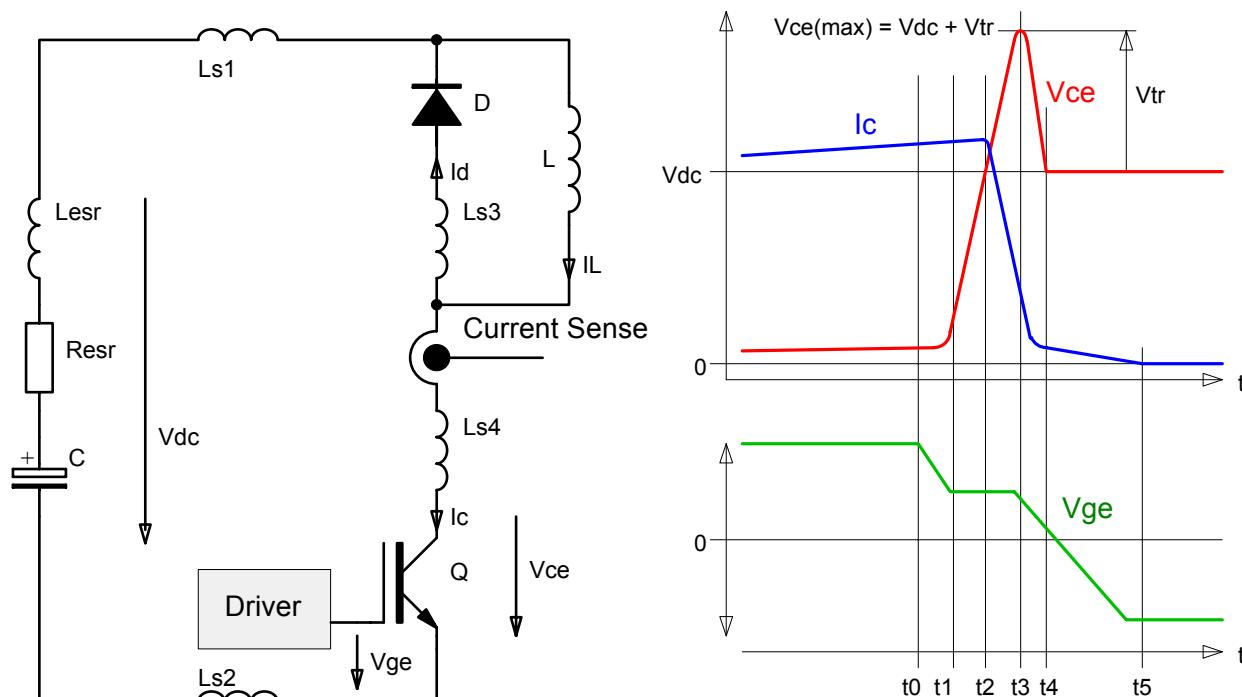


Fig. 11 Test circuit (left) and typical switching behavior (right)


## Description and Application Manual

Legend to Fig. 11

- t<sub>0</sub> = Initiation of the turn-off process
- t<sub>1</sub> = Start of turn-off time
- t<sub>2</sub> = Start of collector current fall time
- t<sub>3</sub> = Maximum collector voltage
- t<sub>4</sub> = IGBT is blocking, start of tail current
- t<sub>5</sub> = End of tail current

In comparison with other driving methods, active clamping allows enhanced utilization of the IGBT modules during normal operation by increasing the switching speed and therefore reducing switching losses. The overvoltage at fault-current turn-off is also managed by active clamping. For the maximum permitted DC-link voltage, refer to the gate driver data sheets /3/.

Figure 12 shows an exemplary turn-off transition of a 400A/650V IGBT module controlled with a 6SP0110T driver.

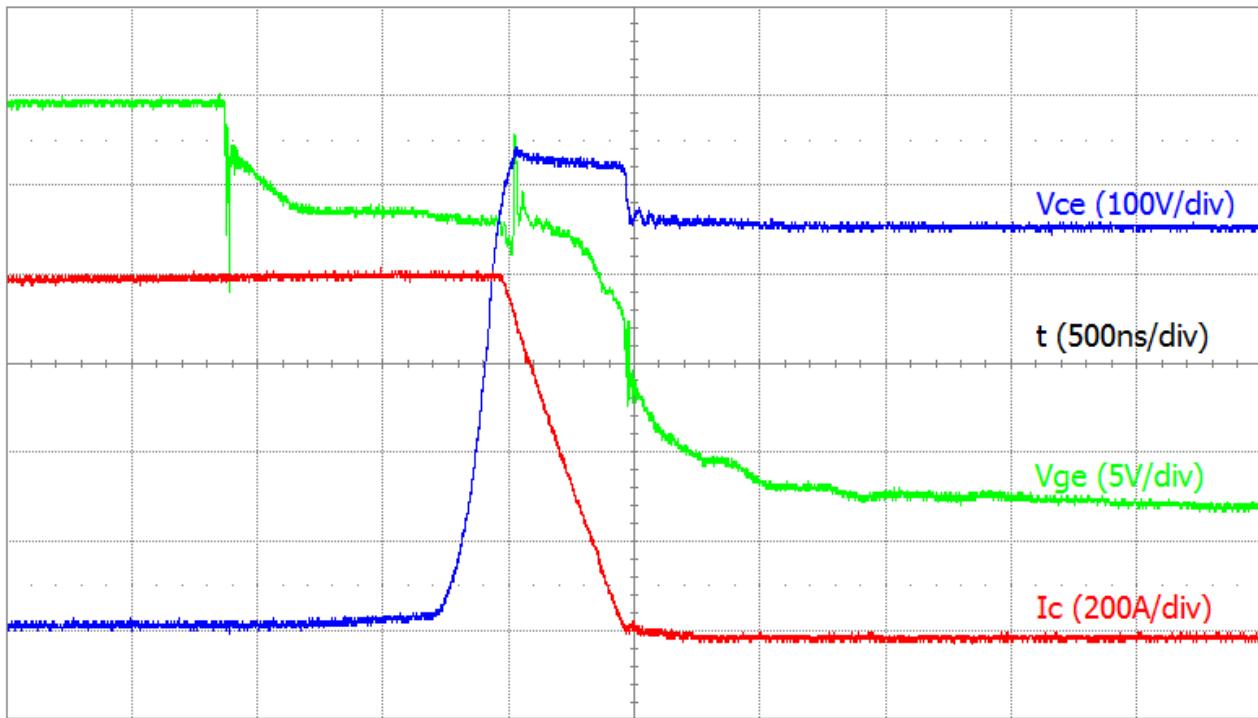

*Fig. 12 Behavior of 400A/650V IGBT module turning off at a DC-link voltage of 450V a collector current of 800A, which is twice the nominal collector current.*

The half-bridges of the HybridPACK™ 1 IGBT modules and drivers have not designed fully symmetrically. The resulting switching behavior of the half-bridges may therefore differ slightly. It is therefore highly recommended to check the switching behavior – especially at turn-off – of the six IGBTs.

CONCEPT has measured the highest (resp. lowest) turn-off collector-emitter overvoltage at the IGBT with gate terminal number 11 (resp. 15) (see IGBT module data sheets /5/).

---

## Parallel connection of 6SP0110T

---

The 6SP0110T are unsuitable for direct parallel connection, as the delay differences between drivers as well as the jitter are too high due to the implemented short-pulse suppression.

---

## Low-inductance layout

---

The active-clamping function should not lead anyone to forget about the inductances of the power stack. For several reasons, it is still necessary to reduce the DC-link stray inductance to about 25nH with 6SP0110T plug-and-play drivers.

## Bibliography

- /1/ "Smart Power Chip Tuning", Bodo's Power Systems, May 2007
- /2/ "Description and Application Manual for SCALE Drivers", CONCEPT
- /3/ Data sheets SCALE-2 plug-and-play driver 6SP0110Txxx-xxx, CONCEPT
- /4/ "Driver Solutions for High-Voltage IGBTs", PCIM Europe Magazine, April 2002
- /5/ Data sheet of the relevant IGBT module, Infineon

**Note:** These documents are available on the Internet at [www.IGBT-Driver.com/go/papers](http://www.IGBT-Driver.com/go/papers)

## Description and Application Manual

### The Information Source: SCALE-2 Driver Data Sheets

CONCEPT offers the widest selection of gate drivers for power MOSFETs and IGBTs for almost any application needs. The largest website on gate-drive circuitry anywhere contains all data sheets, application notes and manuals, technical information and support sections: [www.IGBT-Driver.com](http://www.IGBT-Driver.com)

### Quite Special: Customized SCALE-2 Drivers

If you need an IGBT driver that is not included in the delivery range, please don't hesitate to contact CONCEPT or your CONCEPT sales partner.

CONCEPT has more than 20 years experience in the development and manufacture of intelligent gate drivers for power MOSFETs and IGBTs and has already implemented a large number of customized solutions.

### Technical Support

CONCEPT provides expert help with your questions and problems:

[www.IGBT-Driver.com/go/support](http://www.IGBT-Driver.com/go/support)

### Quality

The obligation to high quality is one of the central features laid down in the mission statement of CT-Concept Technologie AG. The quality management system covers all stages of product development and production up to delivery. The drivers of the SCALE-2 series are manufactured to the ISO9001:2000 quality standard.

### Legal Disclaimer

This data sheet specifies devices but cannot promise to deliver any specific characteristics. No warranty or guarantee is given – either expressly or implicitly – regarding delivery, performance or suitability.

CT-Concept Technologie AG reserves the right to make modifications to its technical data and product specifications at any time without prior notice. The general terms and conditions of delivery of CT-Concept Technologie AG apply.

---

Target

## Ordering Information

See the current list on [www.IGBT-Driver.com/go/6SP0110T](http://www.IGBT-Driver.com/go/6SP0110T)

Refer to [www.IGBT-Driver.com/go/nomenclature](http://www.IGBT-Driver.com/go/nomenclature) for information on driver nomenclature

The general terms and conditions of delivery of CT-Concept Technologie AG apply.

## Information about Other Products

### For drivers adapted to other high-voltage or high-power IGBT modules

Direct link: [www.IGBT-Driver.com/go/plug-and-play](http://www.IGBT-Driver.com/go/plug-and-play)

### For other drivers, evaluation systems product documentation and application support

Please click onto: [www.IGBT-Driver.com](http://www.IGBT-Driver.com)

## Manufacturer

CT-Concept Technologie AG  
Intelligent Power Electronics  
Renferstrasse 15  
CH-2504 Biel-Bienne  
Switzerland

Tel. +41 - 32 - 344 47 47  
Fax +41 - 32 - 344 47 40

E-mail [Info@IGBT-Driver.com](mailto:Info@IGBT-Driver.com)  
Internet [www.IGBT-Driver.com](http://www.IGBT-Driver.com)

© 2011 CT-Concept Technologie AG - Switzerland.  
We reserve the right to make any technical modifications without prior notice.

All rights reserved.  
Version of 2011-11-03